

## Quick Installation Guide

Thank you so much for choosing Comfee' appliances. We really appreciate your choice and would love to help you get started.




### 1 Unpacking


You'll soon be enjoying your new appliance

This guide will help you get started, for full details, please refer to the instruction manual.

#### What's in the box >>

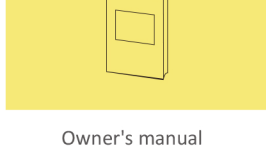

Owner's manual

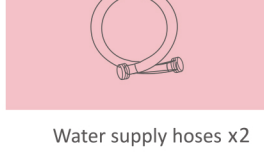


Water supply hoses x2




Water intake cap



Quick connection adaptor

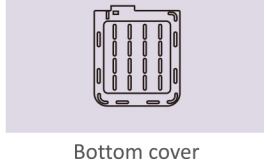

Bottom cover

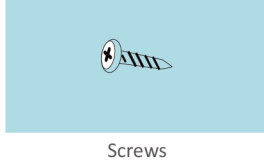

Screws


### 2 Installation

Bringing it all together

**Important:** Before installing, please make sure there are rubber gaskets inside the fittings at both ends of the water supply hoses. Missing rubber gaskets can cause water leakage.

#### Install the Bottom Cover >>

Slide the bottom cover into the slots on bottom surface of the unit as shown in the following figure. Fix it with two screws attached with the unit.

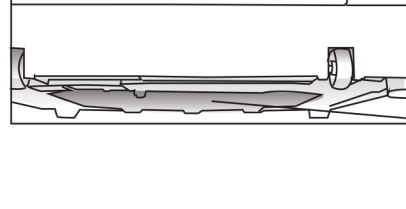

Bottom Cover

#### Connect the water hose

1. Connect the ends of the water supply hoses to the HOT and COLD faucets. Use the **Quick Connection Adaptor** for connection to the COLD water faucet.
2. Connect the ends of the water supply hoses to the water supply inlet connections at the back of the washer.
3. Turn on the HOT and COLD water supplies and check all the water supply intake connections and the faucets for water leaks.

#### Connect the drain hose >>

The drain hose can be positioned in three different ways



Over the edge of a wash basin.



In a standpipe.




In a laundry tub.

#### Leveling your washer >>

See if the washer is level by checking the position of the tub or using a leveling gauge.

1. Slide the washer into position.
2. Open the lid of the washer, and pour water into the tub to just below the pulsator level.
3. If the washer is level, the pulsator is positioned at the center of the washer as shown in the figure above right. If not, level your washer by turning the front leveling feet clockwise or counterclockwise as necessary.

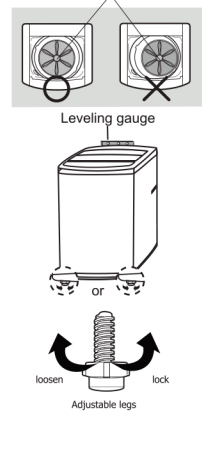

### 3 Using your washing machine

Let's get started

**3 > Customization**  
Customize your load size and temperature as needed.

**2 > Program**  
When the light is constantly on, program on the left is selected. When the light flashes, program on the right is selected.

**1 > On/Off**  
Press to turn On/Off the machine.

**4 > Procedure**  
Press to customize the cycle steps included. The related light will be ON indicating the step been selected.

**5 > Delay**  
Press to delay start your washer. Press once to add 1 hour each time.

**6 > Start/Pause**  
Press to Start/Pause washing.

#### Running a test cycle >>

- Run a test cycle to check if your washer is properly installed.
- The washer should not rock or vibrate excessively when water is supplied or when washing or spinning, and should drain well during the spin cycle.

**WARNING** If water leaks while water is being supplied or drained, check the water connections. If the washer rocks and vibrates excessively, level your washer again.

### 4 Troubleshooting

We are always here to help

If you require any technical guidance or find that your washing machine is not operating as intended, a simple solution can often be found in the Troubleshooting section of the Owner's Manual.

#### Commonly seen error codes and solutions:

Error Code	Description	Possible Cause	Solutions
E1	Water is not supplied	1. Water tap is not checked	Check the water tap and open it fully
		2. Water inlet is blocked	Clean the valve filter with a brush
		3. Water inlet valve is broken	Replace the water inlet valve
E2	Not draining	Drain-pipe is hung too high	Install the Drain-pipe as instructed
		Drain valve is blocked	Unclog the drain valve
		Drain pump filter is blocked	remove and unclog the drainage pump filter
E3	Lid open alarm	The top lid is open	Close the lid and Press ON/OFF button
E4	Unbalance alarm	Washing machine foot is not balanced	Check if the machine is level
		Unbalanced load	Check if clothes are spread out evenly in the drum. Restart the machine when the load is redistributed.
XX	Others	Others	Restart the machine, call the service line if the problem still exists.

For further assistance, feel free to contact us at 1-866-646-4332 with the following information ready:

Model No.

Serial No. (You can find it on xxx)

Date of Purchase

Problem